

# Olympus Device Configuration Manager

- Release Note -

Ver.2.1

2011/6/2

OLYMPUS IMAGING CORP.

**- Table of Contents -**

<b>1. Introduction</b>	<b>1</b>
1.1. System Overview	1
1.2. Support OS	2
1.3. Support Language	2
1.4. Support Devices	2
1.5. Starting up DCM	3
<b>2. Operations</b>	<b>4</b>
2.1. Doing voice recognition	4
2.1.1. Do voice recognition using initial setting	4
2.2. How to change VR settings	8
2.2.1. Template	8
2.2.2. The structure of “Template”	9
2.2.3. Create Template	10
2.2.4. Import or Export “Template”	13
2.3. Customize Directrec options	14
2.3.1. How to customize	14
2.3.2. Import and Export customize information	15
<b>3. Technical information</b>	<b>17</b>
3.1. Relation with DSSPlayer Pro R5	17
3.1.1. Co-exist DSSPlayer Pro R5 DM/TM with DCM	17
3.1.2. Co-exist DSSPlayer Pro R5 DCT with DCM	18

## 1. Introduction

The release note describes overview of Olympus Device Configuration Manager (DCM).


### 1.1. System Overview

DCM allows you to do voice recognition (VR) easily with Nuance Dragon NaturallySpeaking (DNS) and Olympus Directrec.

DCM relates some commands regarding voice recognition to each buttons of Olympus Directrec. When a user operates some buttons of Directrec connected to a PC, DCM recognizes his or her operation, then DCM controls each functions for the voice recognition.

DCM v2.0 supports these features below:

	Command Type	Detail
①	Control DNS	Control DNS running beforehand. e.g. Start or Stop voice recognition, Correction recognized texts, and anymore.
②	Shortcut	Send shortcut commands to the application which has system focus on the PC. For example, please imagine a situation that you arrange a shortcut "Ctrl + A" to the "A" button of Directrec. When you set system focus on a Notepad Window, input texts using keyboard, then click "A" button of Directrec. All texts on the Notepad should be selected as you push "Ctrl + A" key from your keyboard.
③	Insert text	When some editable text applications, such as Notepad or MSWord, have system focus, DCM input some texts at the position where the cursor is.
④	Launch applications	Launch installed applications.
⑤	Waiting	Wait for specified seconds before doing next commands.

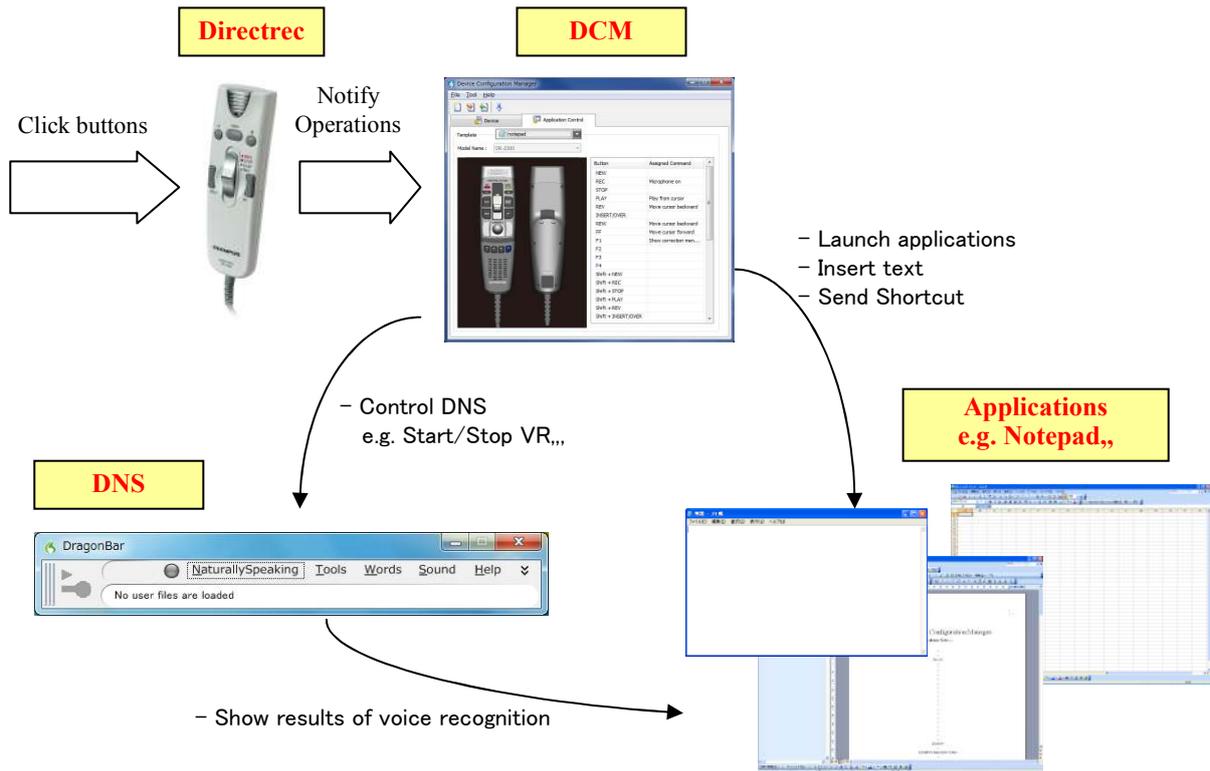

## 1.2. Support OS

Windows XP, Windows Vista, Windows 7, both of on 32bit/64bit Platform

※ Supports these Editions as below (the same with Directrec Configuration Tool bundled with DSSPlayer Player Pro R5.0.10):

Windows®XP	32bit : Professional Edition / Home Edition SP2,3 64bit : Professional Edition / Home Edition SP2,3
Windows Vista®	32bit : Ultimate / Enterprise / Business / Home Premium / Home Basic SP1,2 64bit : Ultimate / Enterprise / Business / Home Premium / Home Basic SP1,2
Windows 7®	32bit : Ultimate / Professional / Home Premium 64bit : Ultimate / Professional / Home Premium ※Starter Edition は非対応

## 1.3. Support Language

Japanese, English, French, German, Italian, Spanish, Russian, Swedish

## 1.4. Support Devices

- ✓ DR-1000
- ✓ DR-2000
- ✓ DR-1200
- ✓ DR-2100
- ✓ DR-2200
- ✓ DR-2300

## 1.5. Support Dragon NaturallySpeaking


Dragon NaturallySpeaking 9.5 or later Professional/Legal

## 1.6. Starting up DCM

DCM is started by Windows System when it starts up, then it stays in the Task Tray as an icon.

You have the following two ways to have the configuration window. :

- Double click the Task Tray icon
- Click right button on the Task Tray icon, then select [Display Main Screen] on the context menu.

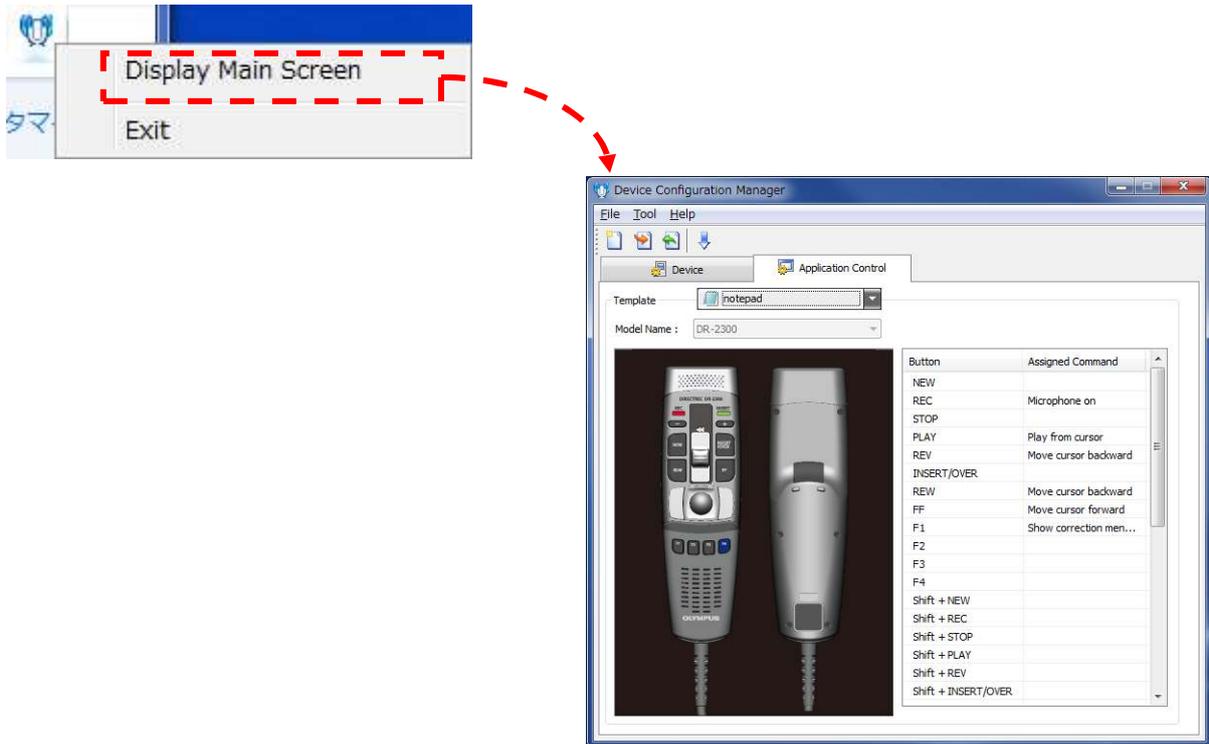

## 2. Operations

### 2.1. Doing voice recognition

This section describes the basic way how to use DCM.

#### 2.1.1. Do voice recognition using initial setting

DCM has the initial settings in order to allow the user to use VR right after installing DCM.

This section describes how to do VR using the initial settings of DCM.

■ Procedure:


**1.** Connect a Directrec to a PC

**2.** Start "DNS"

⇒When you start DNS at the first time, you have to create your user profile of DNS. Create it, logs into the DNS using your user account, then move on the next step.


**3.** Click right button on the Task Tray icon, then click [Display Main Screen].

⇒Please confirm the initial settings of DCM which is shown in "Application Control" tab.

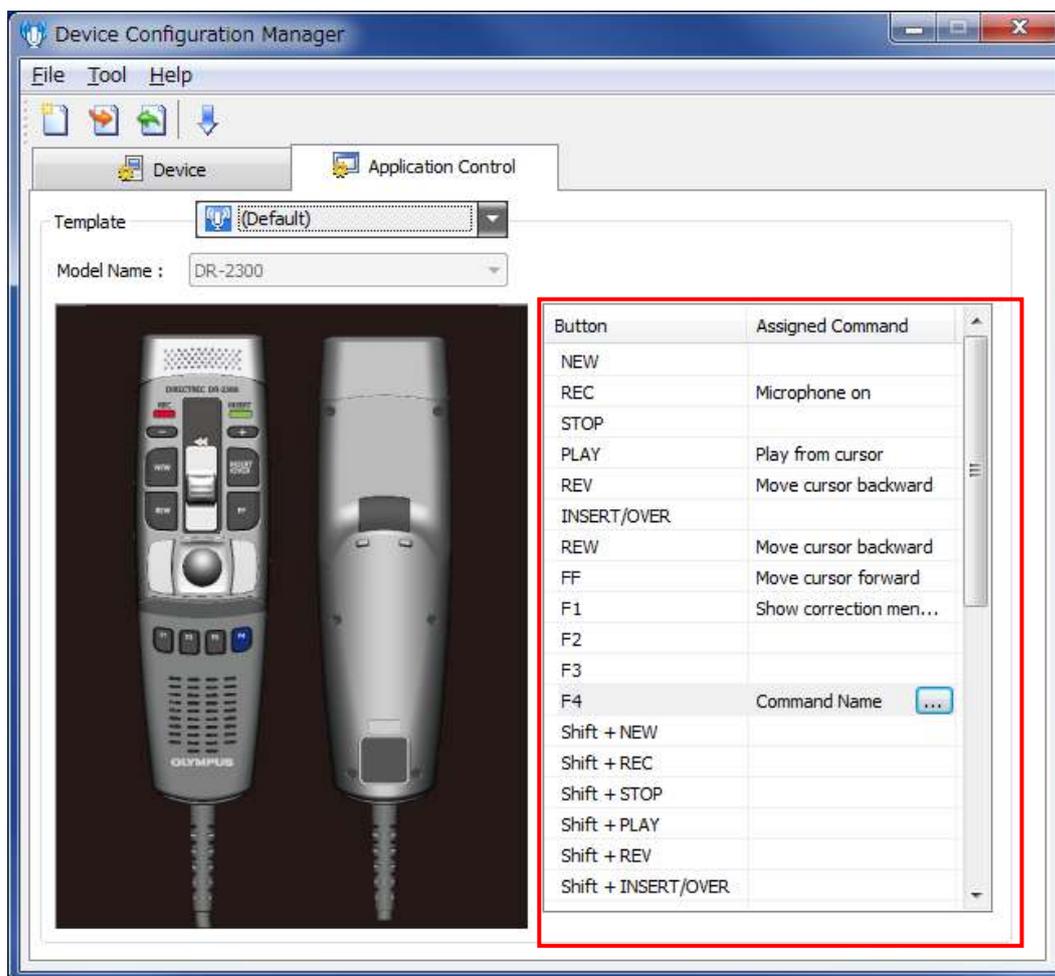

## 4. Launch an application which output the result of voice recognition.


⇒After it launches, please set focus on the application window.

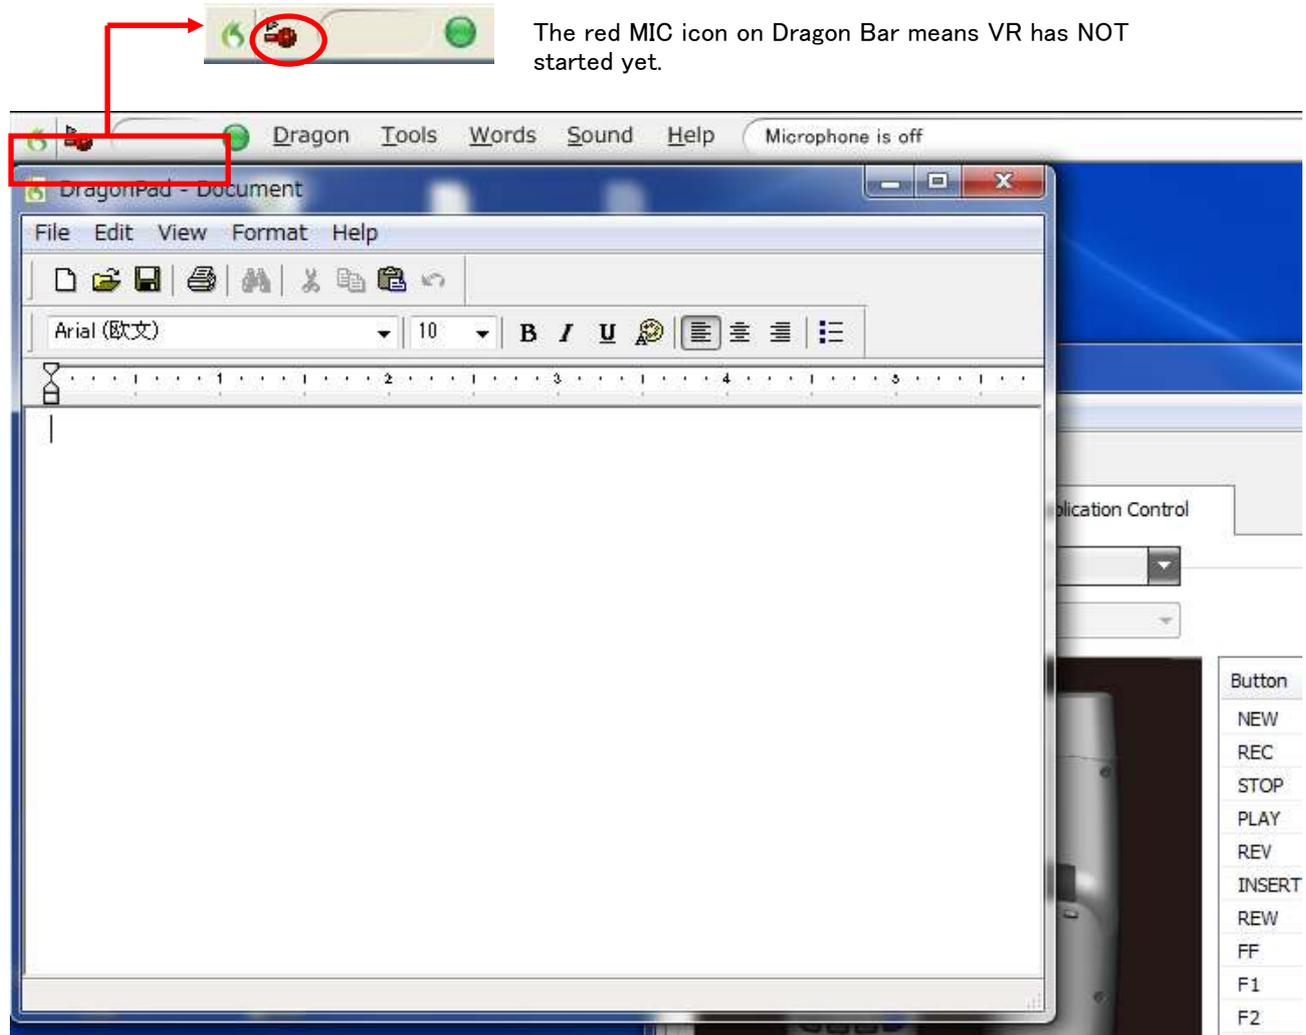

5. (On using DR-2xxx) Slide SlideSwitch to the REC position. Voice recognition starts.




The green MIC icon on Dragon Bar means “VR is working”. In addition, the progress of VR is shown on the focused application window.

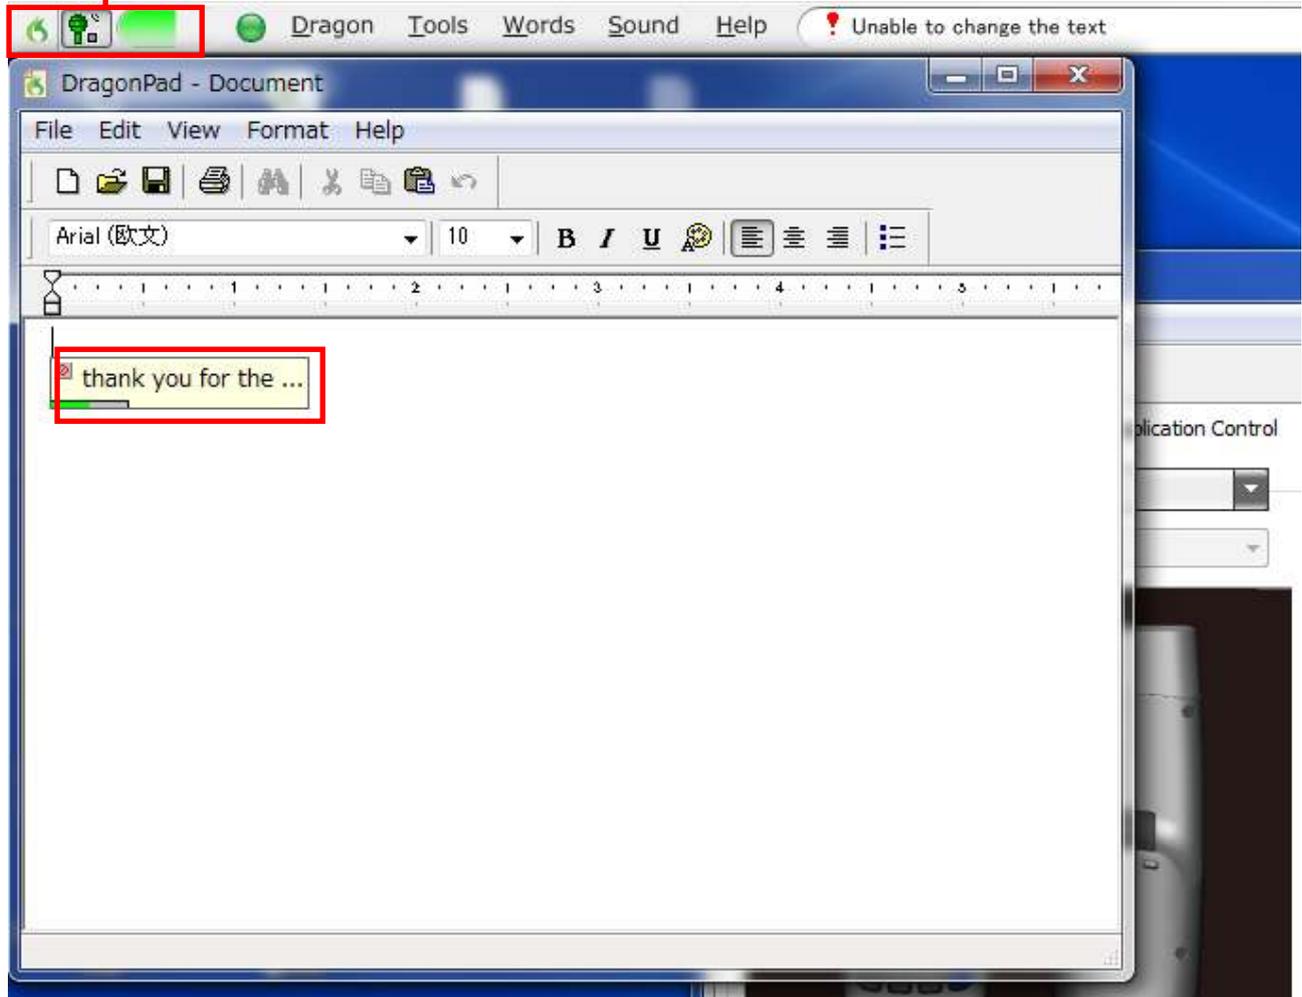

6. (On using DR-2xxx) After finishing voice recognition, slide SlideSwitch to the "Stop" position. DNS stops voice recognition.



The MIC icon turns to red again. It means "VR" is stopped.

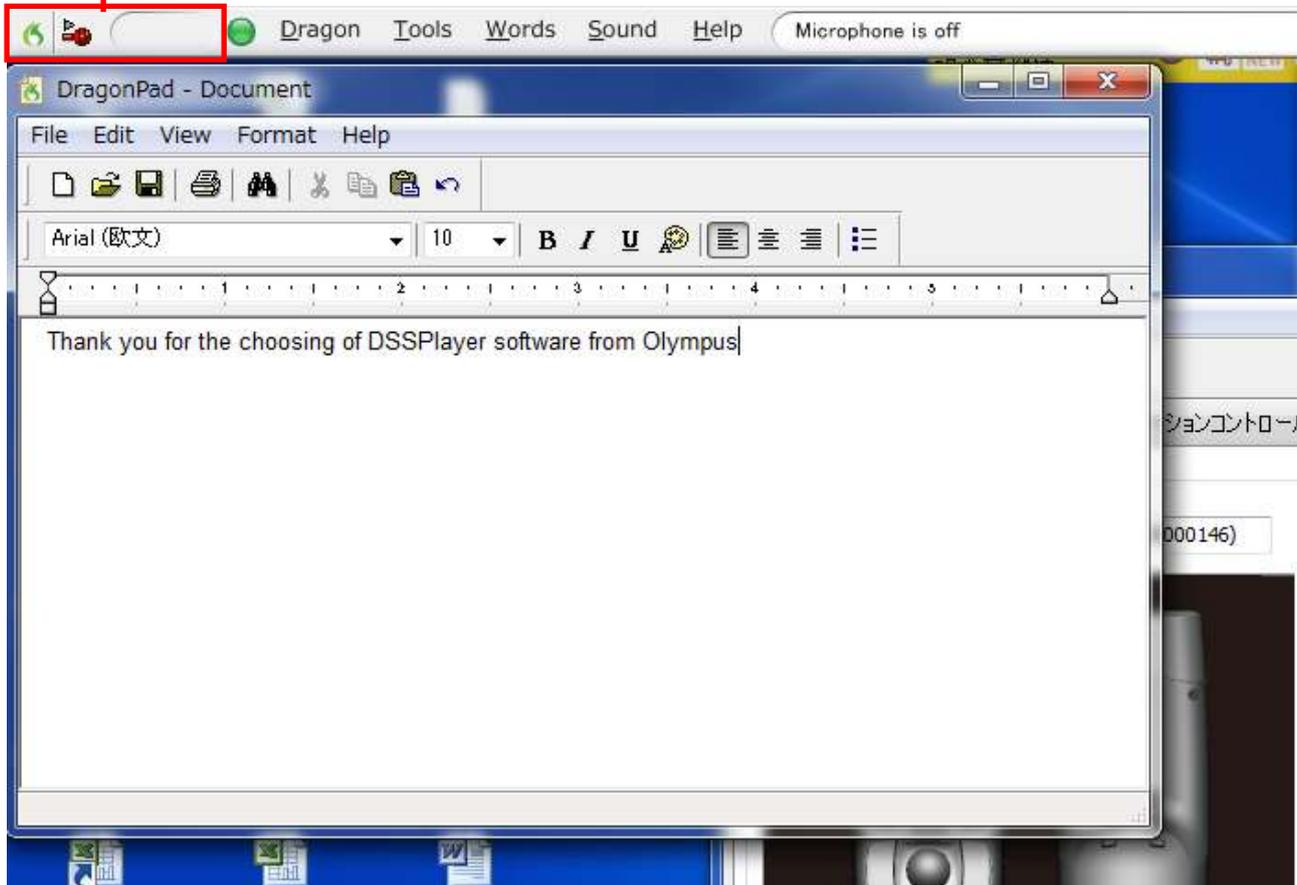

## 2.2. How to change VR settings

### 2.2.1. Template

DCM allows you to change its VR settings freely.

These are customized for each application which output the result of VR. “Template” has all settings for each application. For example, when you create a Template for Notepad, it has all VR settings for all supported devices when you output the result of VR to Notepad.

When you use Notepad to output the result of VR (means Notepad is active on the system), DCM uses “Template : [notepad]” (see the pull down list below). When MS PowerPoint is active, “Template : [MS PowerPoint]” is used. DCM finds the active application at that time, and selects the appropriate Template automatically.

If you’ve not created the Template for the active application (e.g. MSWord or WordPad in the sample below), or the appropriate Template is DISABLE, “Template : [(Default)]” is used.


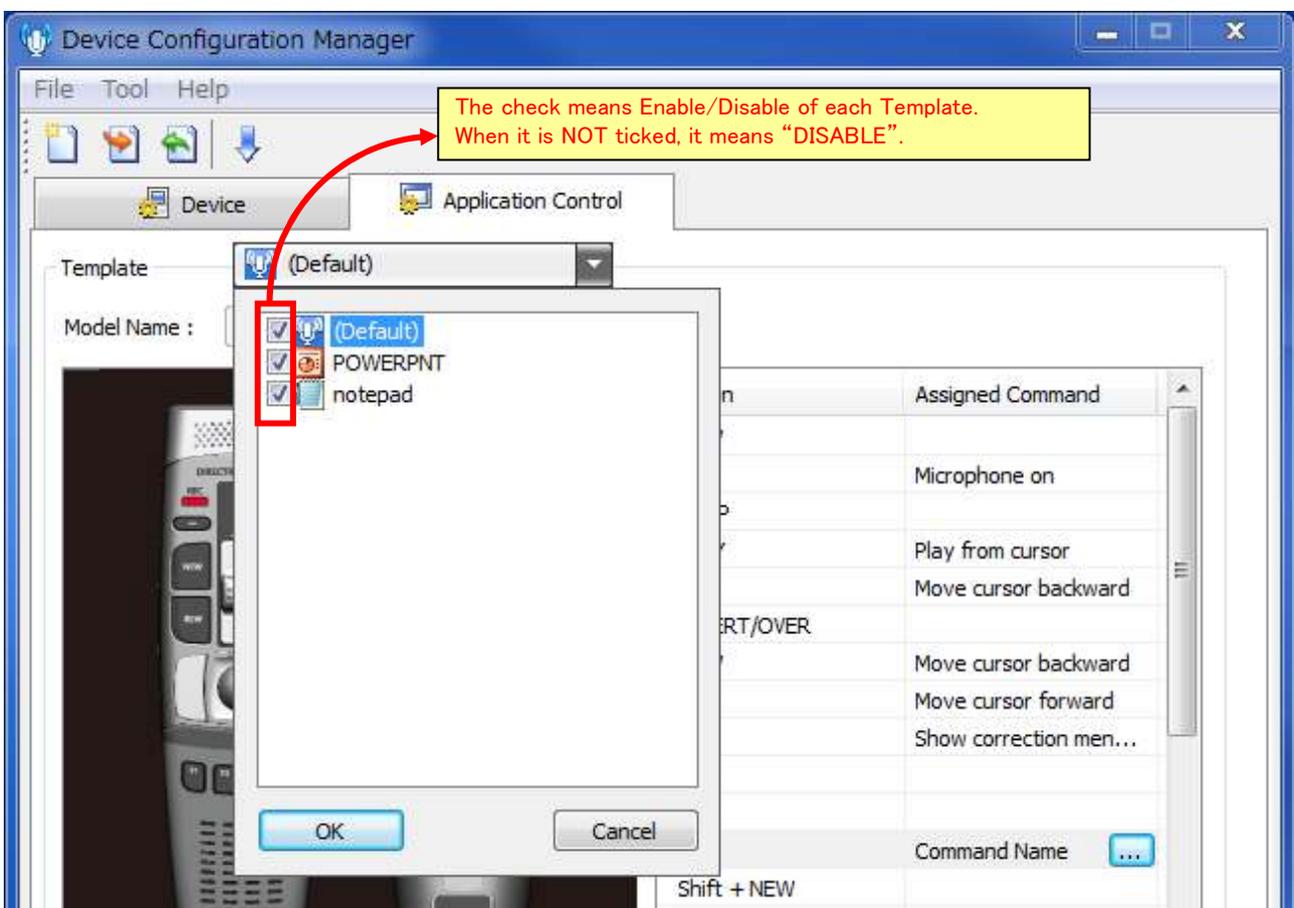


Fig. 2.2-1 Sample Template list

## 2.2.2. The structure of “Template”

DCM v2.0 supports multiple models of Olympus Directrec.

As described in “2.2.1Template”, you have to create Templates for each application which is used to output the result of VR. Each Template has all button configurations regarding all supported models on VR for the each application.

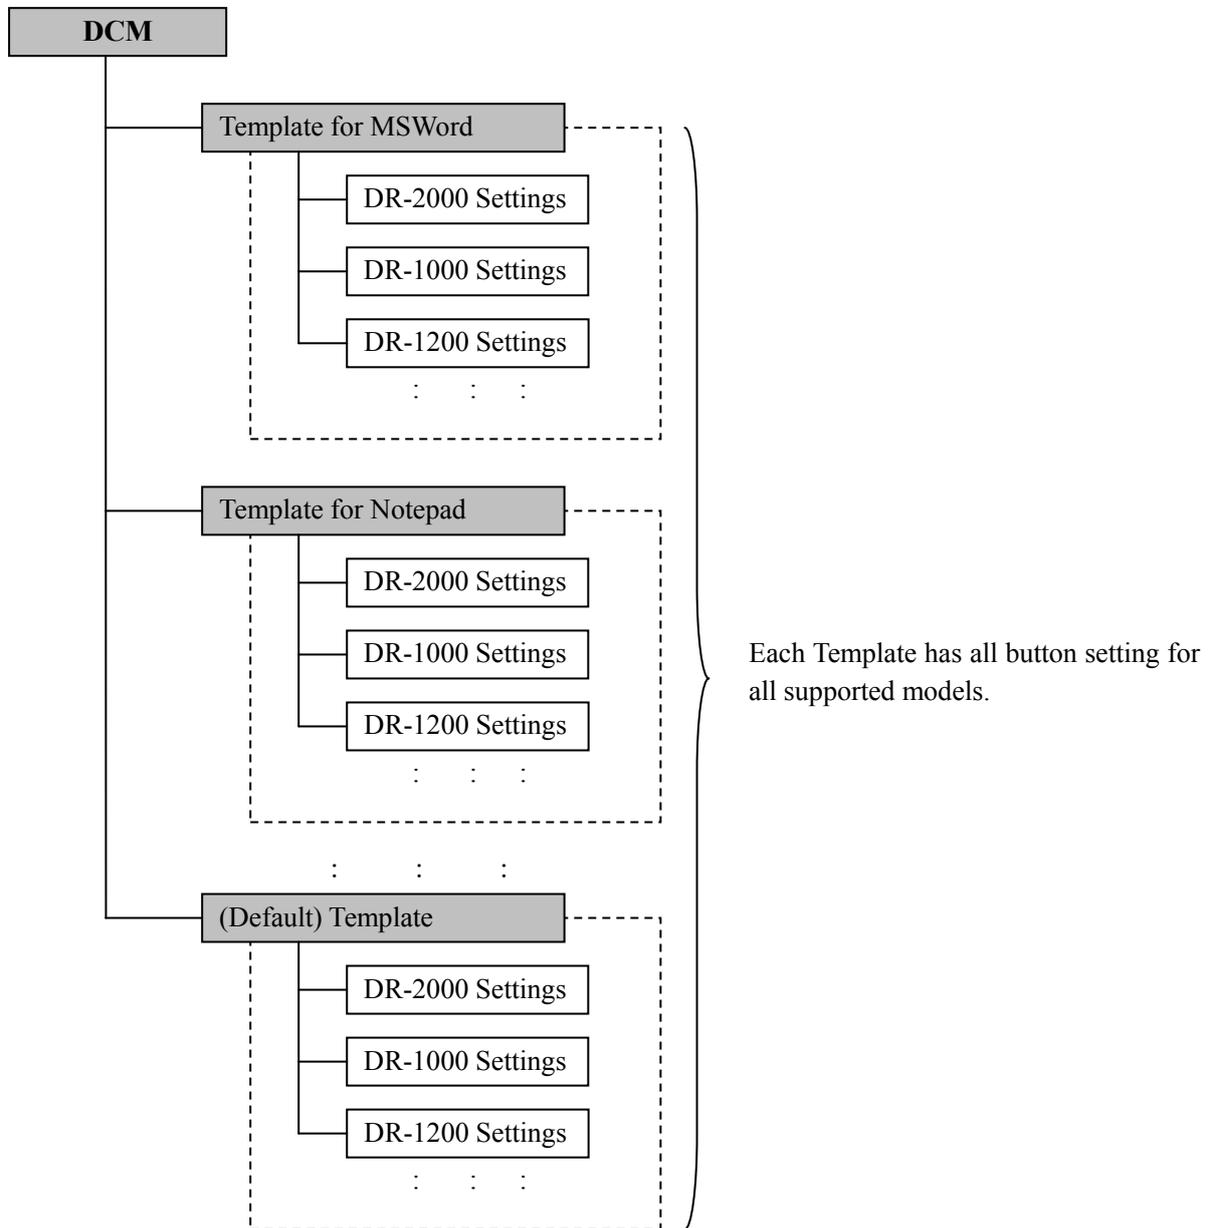


On configuring a Template, you should select just one model in the [model name] box on the “Application Control” Tab. Whenever you change some settings on it, DCM shows a confirmation message whether the modification should be applied to the other models. When the user selects [Yes], the modification which was done in that time will be applied to the other (Not displayed) models, so you can always synchronize key settings among all supported models in the Template.

## 2.2.3. Create Template

This section describes how to create new Template for an application.  
“MSWord” is used as the sample in the procedure below.

### ■ Procedure:

1. Click right button on the DCM Task Tray icon, then click [Display Main Screen] on the context menu.  
⇒The configuration window of DCM appears. Select "Application Control" tab.
2. Select [New Template] on [File] menu.  
⇒"Select Executable" dialog (file selection dialog) will appear.
3. Move to the MSWord installed folder, select "WINWORD.EXE", then click [Open].

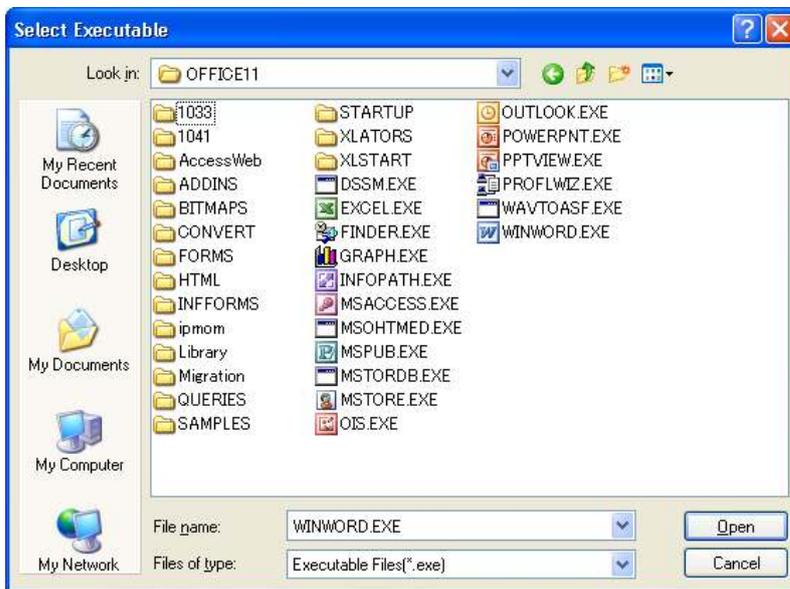


4. The Template for the MSWord should be added.



- 5.** Click [...] button shown on the [Assigned Command] cell which you want to change settings. "Edit Command" dialog will appear.

**Note :** You can set multiple commands for each button. Also, you can specify the operation order. For example, you can configure commands to insert a text format before starting VR (e.g. Greeting text), doing VR, and then insert the other text format after the result of VR as the sample screen shot below.

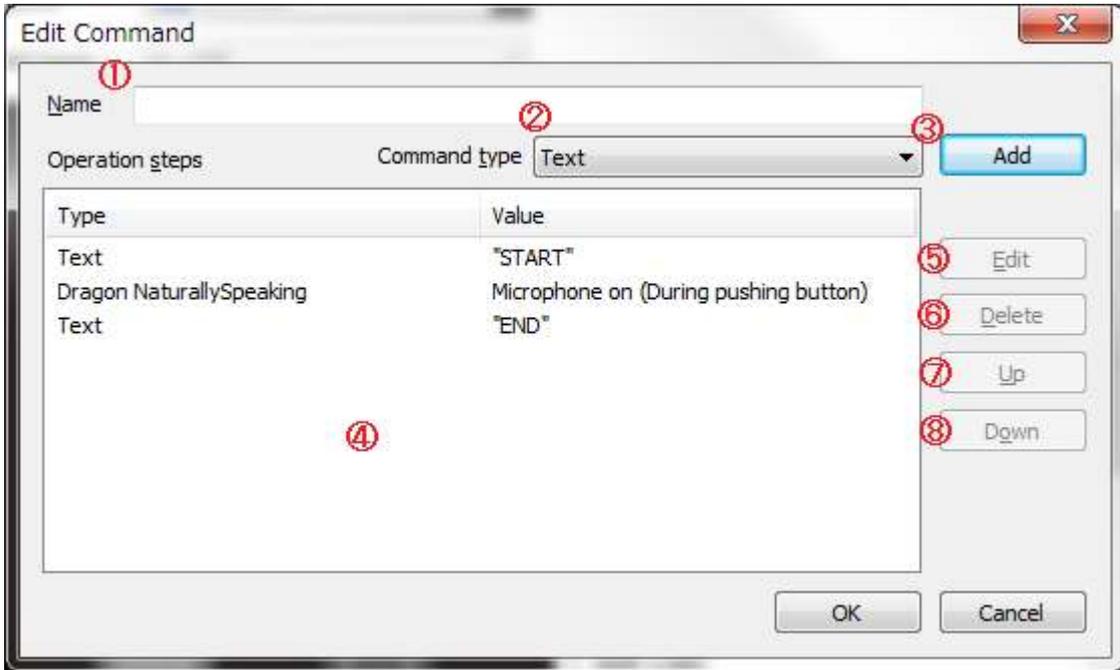

-> See online help of DCM how to add or edit each command.

①	Name	Input the name of the command. It will be shown in the [Assigned Command] cell on the "Application Control" Tab. If you do NOT set it, the registered commands will be listed up in the cell.
②	Command type	Change command type which is registered when [Add] button is clicked.
③	Add	Add a command. The dialogs will be shown according to the selected in ②"Command Type".
④	Operation Steps	Show all registered commands in order. In the sample above, the button of Directrec is pushed, text "START" will be inserted on the active editor, and VR works while the button is pushed. Then release the button, VR should be finished and add text "END" after the result of VR.
⑤	Edit	Edit the command which is selected in "④Operation Steps". An appropriate edit dialog will appear.
⑥	Delete	Delete the command which is selected in "④Operation Steps".
⑦	Up	Move the selected command in "④Operation Steps" up and down one by one.
⑧	Down	

## 6. Click [OK].

⇒ Added commands are shown in the modified “Assigned Command” cell when you return back to the main window.



If you did not set command name in Step.5, the registered commands are listed up in the “Assigned Command” cell as “F3” on the sample screen shot above.

If you set command name in Step.5, the specified command name is shown in the “Assigned Command” cell as “F4” above.

## 7. Connect Directrec to the PC and launch MSWord. Set focus onto the MSWord window, and then operate Directrec.

## 2.2.4. Import or Export “Template”

Users can export their Templates as XML files. Also, users can also import these XML files exported by the other users.

Please imagine the situation that there are multiple Directrec users in an office and their administrator want to use the same configuration for all of them. The administrator can do it by creating a Template using his DCM, export and provide it for his members. Members can share one setting by importing the administrator’s XML file.

### ■ Contents of XML file :

DCM records all Templates into an exported XML file. When a user exports them, the user can not select which Templates or devices being exported.

Also, if a Directrec is connected when a user exports, the configuration of the Directrec which is shown in “Device” tab are exported into the XML file.

### ■ How to Export :

1. Click right button on the DCM Task Tray icon, and then click [Display Main Screen].  
⇒The configuration window of DCM will appear.
2. Select [Export Template] on [File] menu.  
⇒”Save Template” Dialog (File output dialog) will appear.
3. Select the destination folder and file name of XML file, and then click [Save] button.  
⇒The XML file will be created in the selected destination folder.

### ■ How to Import :

1. Click right button on the DCM Task Tray icon, and then click [Display Main Screen].  
⇒The configuration window of DCM will appear.
2. Select [Import Template] on [File] menu.  
⇒”Select Template” dialog (File selection dialog) will appear.
3. Select a XML file which you want to import, and then click [Open].  
⇒“Device Selection” dialog will appear.



4. Select model names which you want to import, and then click [OK].  
⇒All Templates relating selected models will be imported.

## 2.3. Customize Directrec options

DCM can change roll (function) of almost all buttons of Directrec. Even though a user does not like default button placement, such as he is a left-handed person, everyone can change the roll of each button freely.

### 2.3.1. How to customize

This section describes how to customize the roll of buttons of Directrec.

#### ■ Procedure :

1. Click right button on the DCM Task Tray icon, and then click [Display Main Screen].

⇒The configuration window of DCM will appear, then open "Device" tab.

2. Connect Directrec which you want to customize to the PC.

⇒The configuration window changes automatically to the connected device window, and then the current configuration of the connected device is shown as below.



3. Change some functions, User ID, and any other options.

⇒See online help of DCM regarding details of each option.

4. After all modification finish, click [Upload Settings].

⇒Modified settings will be uploaded to the connected Directrec.

## 2.3.2. Import and Export customize information

If some users want to use the same device configuration for their Directrec, they can also do it by export and import Template.

### ■How to export :

1. Click right button on the DCM Task Tray icon, then click [Display Main Screen].  
⇒The configuration window of DCM will appear.
2. Connect Directrec which the model you want to export the configuration to the PC.
3. Change options on the "Device" tab and then click [Upload Settings] button if you need.
4. **With connecting Directrec to the PC**, select [Export Template] on the [File] menu.  
⇒"Save Template" dialog will appear.

Note:	If you export template without connecting Directrec to the PC, the device configuration will NOT be exported into the Template.
-------	---

5. Specify the destination folder and file name, then click [Save].  
⇒A XML file should be created.

### ■How to import :

1. Click right button on the DCM icon in the Task Tray, then click [Display Main Screen].  
⇒The configuration window of DCM will appear.
2. Connect Directrec to the PC.
3. Select [Import Template] on the [File] menu.  
⇒"Select Template" dialog will appear.
4. Select the XML file which you want to import, then click [Open].  
⇒"Device Selection" dialog will appear.



- 5.** Select the model name which you connected in Step2, then click [OK].

⇒A message to confirm whether upload the new configuration to the Directrec will appear.

Note:	If you don't select the model name of connecting model on "Device Selection" dialog, the configuration of the connecting model won't be imported, so the configuration of the connecting device won't be uploaded.
-------	--

- 6.** Click [Yes].

⇒The configuration of connecting Directrec will be uploaded. Also, all settings on "Application Control" will be imported.

## 3. Technical information

### 3.1. Relation with DSSPlayer Pro R5

DCM handles all button operations from Directrec singly on the PC, and divides processes to the DNS or some applications. However, DSSPlayer Pro R5 also need to handle the button operations from Directrec, so there is a collision if these co-exist on the one PC.

Therefore, there are some rules between them.

#### 3.1.1. Co-exist DSSPlayer Pro R5 DM/TM with DCM

Basically, DCM is completely designed as separate software, so it can be started while DM/TM is running on the PC. However, both of DCM and DM/TM are running on the one PC, all button operations on Directrec are handled only by DCM, so DM/TM can not recognize user's operations. Therefore, if you want to record voices using Direct Recording Window of DM, you can not control it by operating Directrec while DCM is running.


In such a situation, users have to change the configuration of DCM that the Direct Recording Window can recognize operations on a Directrec.

#### ① Exit DCM

While DCM is not running, the button operation should be notified to DM/TM.

#### ② Create Template for DM/TM in the DCM. Arrange short cut keys of the Template as the same with short cut configuration of Direct Recording Window.

If it is troublesome to exit DCM whenever you use Directrec with DM/TM, you should create Templates for DM/TM at the same way with MSWord or Notepad. Then you have to arrange short cuts as the same with the Direct Recording Window. DCM will send short cuts whenever users operate some buttons on Directrec, Direct Recording Window works as its short cut configuration.

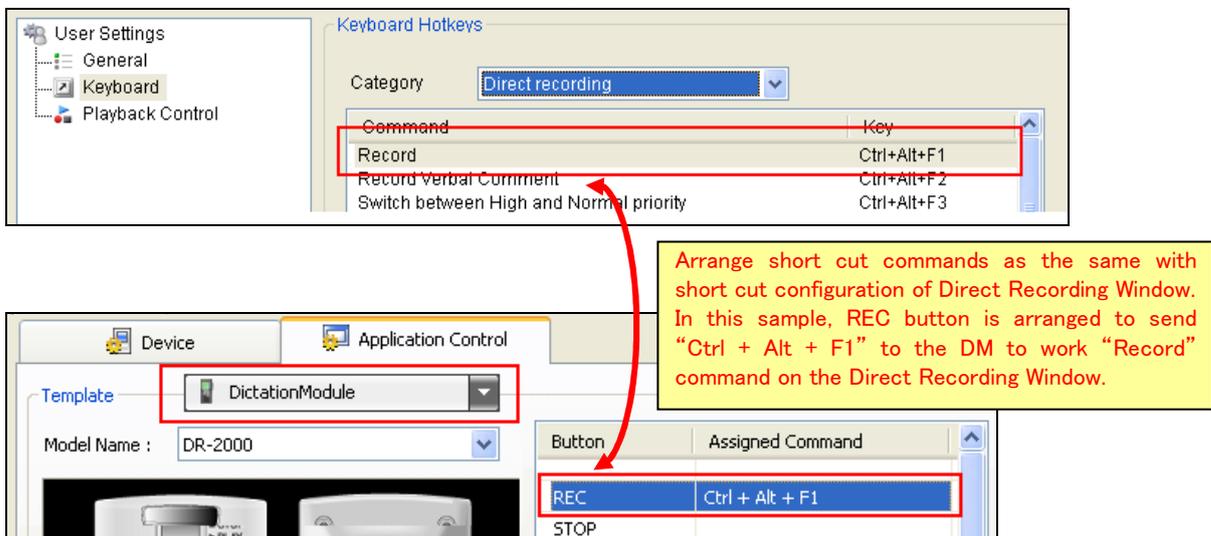

### 3.1.2. Co-exist DSSPlayer Pro R5 DCT with DCM

DCM and DCT can not run at the same time on one PC because both of them are designed to handle all button operations singly on a PC. Therefore:

- ✓ DCT can not be started while DCM is running.
- ✓ When DCM is started while DCT is running, DCM kills DCT forcibly and then starts itself.